

Instructions for integrating

AC•THOR / AC•THOR 9s / AC ELWA 2

with Huawei



! my-PV and Huawei recommend communication via a local area network (LAN). The corresponding control type at my-PV is called "Huawei (Modbus TCP) Manual". Alternatively, the control could also be done via Modbus RTU. If a battery storage is available, however, "Huawei (Modbus TCP) Manual" must be used explicitly!

1. Default settings on my-PV devices

Before commissioning, it is essential that you read the assembly instructions that accompany the device, as well as the operating instructions available on line.

Find the AC•THOR operation manual [here](#).

Find the AC ELWA 2 operation manual [here](#).

2. Communication with Huawei via local network (recommended)


AC•THOR or AC ELWA 2 are connected to Huawei in the network via a router. Within this network, the device receives the information how much surplus PV power is available from Huawei.

! Do not connect the device directly to the inverter or battery system!

! When controlled by an inverter, a feed-in meter is required in the system. Otherwise, the query of the inverter does not provide any data.

3. Settings on my-PV device

For the AC•THOR, select "Huawei (Modbus TCP) Manual" for the control type either on the display **or** in the web interface. The IP address of the signal source must then be statically entered on the display under "Ctrl IP".

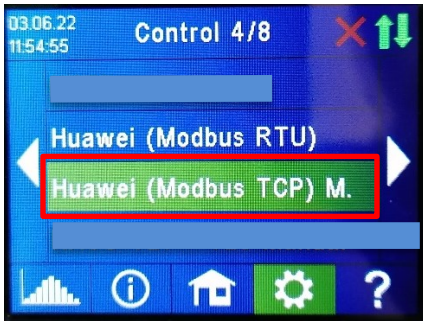

Alternatively, these settings can also be made on the web interface of the AC•THOR. In the web setup, the parameters "Device ID" and "Device Port" can also be set by Huawei.

For the control "Huawei (Modbus TCP) Manual", my-PV presets device ID 1 and device port 502.



If there are several inverters, the unit ID may have to be adjusted!

Control Settings

Control type:
AC•THOR Number > 1: only 'Slave' selectable.

TIP: For many control types there are separate instructions for the required settings.
More information can be found [here](#).

Control source IP address:

Device ID: 1

Device port: 502

Control state: Modbus multiple Write received

Power timeout: 60 s

Control target: -50 W

Negative value means feed-in. Only change this value if you are familiar with the control strategy - read Help for more details.

Interval target value:
Interval target value: If active, a different target value of the control is used in the set time window.

Block start / stop hour: 0 0

Save

The "power timeout" is preset to 60 seconds.

If there is a battery storage (ESS) in the system and it is to be charged with priority, then the "Target value of the control" should be set to -150 W. Otherwise, we recommend leaving -50 W.

Settings on Huawei for Modbus TCP with the Smart Dongle



When communicating with Huawei via network, the IP address of the inverter must not change during operation (e.g. by a DHCP router), otherwise AC•THOR or AC ELWA 2 will lose the control signal!



The following information and illustrations have been kindly provided to my-PV by Huawei. my-PV cannot guarantee the accuracy of the information or that the views are up-to-date.

Overview

- All **Huawei inverters** up to 40kW rated power with SmartDongle WLAN-FE are **compatible with MODBUS TCP**
 - SUN2000 2 to 6 KTL-L1
 - SUN2000 3 to 10KLT-M0/M1
 - SUN2000 12 to 20KLT-M0/M2
 - SUN2000 30 to 40KTL-M3
- Huawei inverter is connected to the router with the **SmartDongle WLAN-FE** via FE cable (FE = Fast Ethernet) or WLAN in the local network.
- It is recommended to install the latest software version (xxxSPC153 in April 2023) on the SmartDongle WLAN-FE (SDongleA-05); it is recommended to perform the software upgrade in the FusionSolar Portal.
- Afterwards, the communication must be opened in the SmartDongle WLAN-FE so that the values can be read from the inverter via MODBUS TCP.
- Display the local IP address of the inverter.



Smart Dongle
WLAN-FE

2



Software Upgrade in FusionSolar Portal

- Read the latest software from SDongleA-05
 - Log in to FusionSolar Portal
 - Plant → Device management
- Upgrade software from SDongleA-05
 - Plants → Upgrade management → Add
 - Update **Now**
 - Device Type **Dongle**
 - Target version **V100R001C00SPC153** or higher
 - Select device and check device name
 - Confirm → Message «Operation done»
- Progress of upgrade is displayed
 - New entry appears in the table, progress is shown in %.
 - Result: Failed: 0, Successful: 1

Device Status	Device Name	Plant Name	Device Type	Software Version	SN
●	*****102029	Amara Solar Academy	Dongle	V100R001C00SPC153	*****102029
●	*****113843	Amara Solar Academy	Inverter	V100R001C00SPC153	*****113843

Device Name	Plant Name	Upgrade Time	Upgrade Rate	Device Type	Target Version	Upgrade Result
Amara Solar Academy	Amara Solar Academy	2023-07-11 09:00:00	100%	Dongle	V100R001C00SPC153	Success


- Smart Dongle restarts after approx. 10 minutes**
 - Check software version: → Device management

3




Software Upgrade with APP (Alternative)

- The software upgrade can also be carried out with the FusionSolar APP; however, the method is more complex than in the portal.
 - **Save V100R001C00SPC153 or higher on the smartphone.**
 - Upgrade is done on the **SmartDongle**; therefore connect the **FusionSolar APP** directly to the SmartDongle.
 - WLAN of the SmartDongle is only active for a few minutes; check in the Android settings whether the WLAN with SSID SDongleA-HVxxx is visible.
 - If the WLAN is not visible, disconnect the **SmartDongle** from the inverter and reconnect it, wait a while until SDongleA-HVxxx appears.
 - Connect with SmartDongle
 - FusionSolar APP → I → Commissioning
 - Scan QR code of SmartDongle WLAN-FE → WLAN Password = **Changeme**
 - Login Installer and password 00000a (SmartDongle appears in the picture)
 - Maintenance → Devices up to date (update)
 - Global Search → **SDongleV100R001C00SPC153_package** or higher
 - Upgrade freeze step is displayed
 - SmartDongle restarts after approx. 10 minutes
- 4 **Please always use the latest APP version!!!**

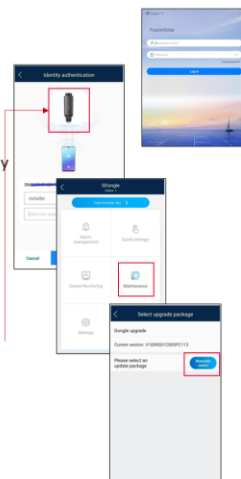

Enable Communication in FusionSolar Portal

- With the **SmartDongle** software xxSPC153 or higher, energy management systems can control the SUN2000 inverter via MODBUS TCP (read and write). Port 502 is used for this purpose. This is closed by default and must be opened.
- **SmartDongle MODBUS TCP open**
 - In FusionSolar Portal login
 - → Choose Plant → Switch to the register Devices
 - → SmartDongle choose → Parameter settings
 - → Register access parameters
 - → Connection / MODBUS TCP
 - «**Enable (unrestricted)**»
 - → Settings

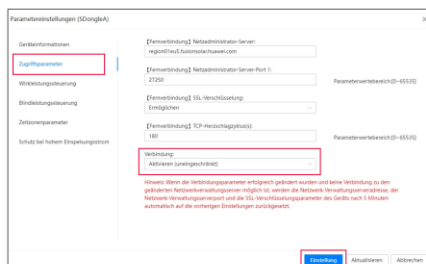


5



Enable Communication with APP (Alternative)

- With the xSPC153 SmartDongle software, energy management systems can control the SUN2000 inverter and the LUNA2000 battery via Modbus (read and write). Port 502 is used for this purpose. This is closed by default and must be opened for SolarManager.
- Modbus TCP enable**
 - Connect to inverter (QR Code)
 - Settings → Communication configuration
 - Dongle-Parametereinstellungen → Modbus-TCP
 - Change to «Enable (unrestricted)» → Confirm

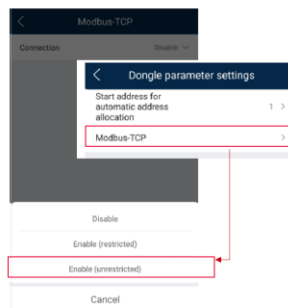

Please always use the latest APP version!!!

6



Read out IP address from APP

- The IP address of the inverter in the local network can ONLY be read out with the FusionSolar APP.
- Read IP address
 - Connect FusionSolar APP to the inverter (QR code)
 - Settings → Communications configuration
 - Select Router connection settings
 - Select WLAN connection or FE connection (LAN cable)
 - Expand details → IP-Adress Read

Read out MODBUS ID from APP

- ID-Adress Read
 - Connect FusionSolar APP to the inverter (QR code)
 - Settings → Communications configuration
 - RS485_1
 - Com address is also the MODBUS TCP address

The inverter with the Smart Dongle usually has the address 1 and the other inverters a higher number. Please check!

Please always use the latest APP version!!!



7



4. Communication with Huawei via Modbus RTU

⚠ If the Huawei Smart Dongle is used on the inverter, communication problems may occur with this type of connection. We therefore recommend using the control type "Huawei (Modbus TCP) Manual" if possible (see chapter 2), especially if a battery storage is available!


The control signal is received via Modbus RTU (RS485, A B GND).

⚠ Use shielded twisted pair cable!

⚠ RTU bus must be provided with a 120 Ohm terminating resistor!


(Not included in the scope of delivery)

⚠ When controlling via Modbus RTU, the operating mode M7 cannot be used!

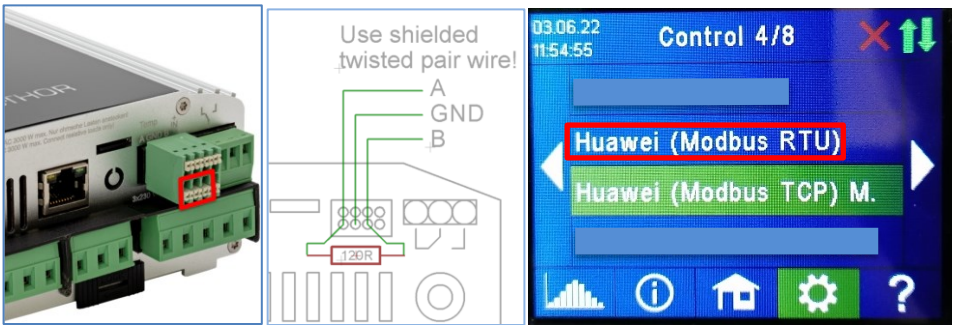

Three pins on the 8-pin connector of the AC•THOR are the Modbus RTU communication port.

The 120 Ohm terminating resistor is not included with the AC•THOR!

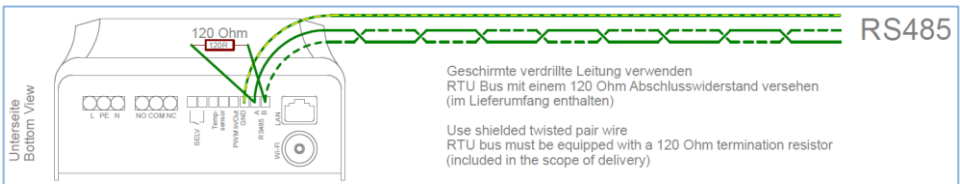

On the AC ELWA 2, the connection is identified by RS485, A, B, GND.

Select "Huawei (Modbus RTU)" for the control type either on the display **or** - if a network connection is available - in the web interface.